


The following explains how to use this product to control a DAB tuner, which is sold separately. For details of DAB tuner-specific operation/features, see your DAB tuner's manual.


- This product does not have the language filter function.
- With this product, you can operate three additional functions: available service list, available PTY search, storing and recalling dynamic label.

Display and indicators

FORM 1

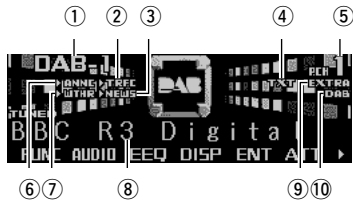

FORM 2

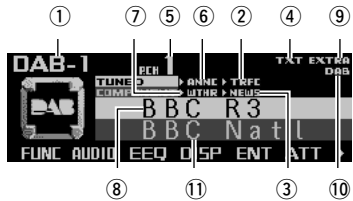

- ① Band
- ② TRFC indicator
- ③ NEWS indicator
- ④ TXT indicator
- ⑤ Preset number
- ⑥ ANNC indicator
- ⑦ WTHR indicator
- ⑧ Service label
- ⑨ EXTRA indicator
- ⑩ DAB indicator
- ⑪ Service component label

Indications that light when function is switched on

Indicator	Function
W (THR)*	Area weather flash (weather)
A (NNC)*	Announce (announce)
N (EWS)*	News flash (news)
T (RFC)*	Road traffic flash or transport flash

* If the set announcement support is received, the letters in parentheses light.

DAB status indications

Indicator	Status
EXTRA	The currently received service has a secondary service component.
TXT	The currently received service has a dynamic label.
DAB	When DAB reception is possible.

Basic operation

1. Press **SOURCE** to select the DAB tuner.
Press SOURCE until "DAB" appears.
2. Press **VOLUME** to extend the **VOLUME** outward.
 - When you press VOLUME, it extends outward so that it becomes easier to turn. To retract VOLUME, press it again.
3. Turn **VOLUME** to adjust the volume.
4. Press **◀** or **▶** to select a service.
5. Press and hold **◀** or **▶** for one second and release to select an ensemble.

Storing and recalling services

Storing services

1. Press **NEXT** to display "1" – "6".
Press NEXT until "1" – "6" appears.
2. When you find a service that you want to store in memory, press and hold any of the buttons 1 – 6 until the preset number stops flashing.
The service is stored in memory under the selected button.

Recalling services

1. Press **NEXT** to display "1" – "6".
Press NEXT until "1" – "6" appears.
2. Press any of the buttons 1 – 6 to recall the service preset under that button.

Note:

- You can also use **▲** or **▼** to recall services memorized under the buttons 1 – 6.

Changing band

- Press **BAND** to select the desired band.
Press BAND repeatedly to switch between the following bands:
DAB-1 → DAB-2 → DAB-3

Switching the display

- Press **DISP** to select the desired display.
Press DISP repeatedly to switch between the following displays:

FORM 1

SERVICE (service label) → COMPONENT (service component label) → D.TEXT (dynamic label segment head line) → ENSEMBLE (ensemble label) → PTY (PTY label)

FORM 2

SERVICE (service label) and COMPONENT (service component label) → D.TEXT (dynamic label segment head line) → SERVICE (service label) and ENSEMBLE (ensemble label) → SERVICE (service label) and PTY (PTY label)

Note:

- With a service component that has no service component label or dynamic label, the display is blank when you switch to service component label and dynamic label.

Switching the road traffic flash and transport flash on or off

1. Press **NEXT** to display "TA".
Press NEXT until "TA" appears.
2. Press **TA** to turn the road traffic flash and transport flash on.
The "▶TRFC" or "T" indicator lights.
 - Press TA again to turn the road traffic flash and transport flash off.

Canceling road traffic flash and transport flash interruptions part way through

1. Press **NEXT** to display "TA".
Press NEXT until "TA" appears.
2. To cancel a road traffic flash or transport flash interruption and return to the original source, press the TA during an announcement interruption.

Dynamic label function

Displaying dynamic labels

1. Press NEXT to display "D.TEXT".
Press NEXT until "D.TEXT" appears.
2. Press D.TEXT to switch to the dynamic label mode.
3. Press ◀ or ▶ to recall the three latest dynamic label broadcasts from the tuner's memory.
Pressing ◀ or ▶ switches between the four dynamic label data displays.

Note:

- Press BAND to cancel the dynamic label mode.
- When no dynamic label is currently being received, "No text" is displayed.
- If there is no dynamic label data stored in the tuner, ◀▶ do not operate.
- If you do not operate the function within about 60 seconds, the display is automatically returned.

Storing a dynamic label

You can store data from up to six dynamic label transmissions under the buttons MEMO1 – MEMO6.

1. Select the dynamic label you want to store in memory.
Refer to "Displaying dynamic labels".
2. Press and hold any of the buttons MEMO1 – MEMO6 until "DAB memo" appears to store the desired dynamic label.
The dynamic label is stored in memory under the selected button.

Recalling a dynamic label

1. Press NEXT to display "D.TEXT".
Press NEXT until "D.TEXT" appears.
2. Press D.TEXT to switch to the dynamic label mode
3. Press any of the buttons MEMO1 – MEMO6 to recall the dynamic label preset under that button.

DAB tuner function menu

The DAB tuner function menu has the following functions:



- ① **AS (announcement support)**
For operation of the announcement support, refer to "Setting the announcement support interruption".
- ② **chLIST (preset service list)**
For operation of the preset service list, refer to "Selecting services from the preset service list".
- ③ **S.LIST (available service list)**
For operation of the available service list, refer to "Selecting services from the available service list".
- ④ **PTY (available PTY search)**
For operation of the available PTY search, refer to "Searching the available PTY".
- ⑤ **P/2ND (primary/secondary)**
Press P/2ND repeatedly to switch to the next service component.

Note:

- If you do not operate the function within about 30 seconds, the display is automatically returned.

Setting the announcement support interruption

1. Press FUNC and then press AS to select the announcement support mode.
2. Press the corresponding button to turn the desired announcement support on.

Button	Announcement
WTHR	Area weather flash
ANNC	Announcement

Note:

- You can also use ◀, ▶ and ▲ to select and turn on the desired announcement.
- You can turn the news flash on or off by pressing NEWS.

Selecting services from the preset service list

1. Press FUNC and then press chLIST to select the preset service list mode.
2. Press any of the buttons 1 – 6 to recall the desired service.



Note:

- You can also use ◀, ▶ and ▲ to select and recall the desired service.

Selecting services from the available service list

The available service list lets you see the list of available services and select one of them to receive, if the currently received ensemble has multiple services.

1. Press FUNC and then press S.LIST to select the available service list mode.
2. Press ◀ or ▶ to select the desired service.



3. Press ▲ to receive the selected service.

Searching the available PTY

Available PTY search lets you see the list of available PTYs that is in the current ensemble and select one of them to receive.

- Available PTY search function is different from PTY search function. With this product, you can operate only the available PTY search.

1. Press FUNC and then press PTY to select the available PTY search mode.
2. Press ◀ or ▶ to select the desired PTY.



3. Press ▲ to start the PTY search.

DAB receives the desired PTY service.

Note:

- The PTY method displayed is narrow.
- If there is no available PTY in the current ensemble, you cannot switch to the available PTY search mode.
- If no service broadcasting the selected programming type is found, "Not found" is displayed briefly, and the DAB tuner returns to the previous service.